



VERUS® PRO

Code Scan Report (editing/printing)

Customizing Report Output

To personalize the shop information included on the Code Scan Report:

1. From the Home screen select **System Settings**.
2. From the System Settings menu select **Shop Information**.
3. Enter your information in the form fields (**Figure 1**), then select **OK** from the toolbar to confirm the setting.

To hide/show the timestamp (time of day) on the Code Scan Report:

1. From the Home screen select **System Settings**.
2. From the System Settings menu select **Shop Information**.
3. Select the **On/Off** checkbox (**Figure 2**), then select **OK** from the toolbar to confirm the setting.

Before You Print

Before you can print the Code Scan Report you must install a printer, see [Printer Setup](#).

Printing (From Code Scan Screen)

After a code scan has been performed, the Code Scan Report can be directly printed by selecting the **Print** icon from the toolbar (**Figure 3**).

When print is selected, the file (**Figure 4**) is sent directly to the default printer.

Printer Setup

To print the Code Scan Report, a printer must be installed and set as the system default printer.

The following is intended as a basic printer setup instruction only. Printer setup will vary. For specific instructions and details, refer to your printer setup information and the online Windows printer setup help information.

Figure 1

Shop Name			
Shop Address			
City, State Zip			
Shop Phone			
Shop Fax			
Slogan			
Comment			
Manager Name			
Manager Title			
Email			
Web Page			

Figure 2

Code Scan Timestamp	
<input checked="" type="checkbox"/> On	
<input type="checkbox"/> Off	

Figure 3

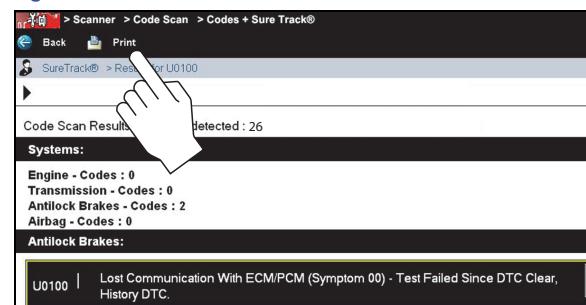


Figure 4

Printed: Monday, November 09, 2015 8:15 AM
VIN: —K-T6—
Year: 2002
Make: Ford
Model: Mustang
Engine: 4.6L V8
Code Scan Summary
Systems Detected: 18
Systems:
Engine - Codes : 4
Transmission - Codes : 1
Antilock Brakes - Codes : 0
Airbag - Codes : 0
Body Control Module - Codes : 0
Door Locks - Codes : 0
Door Module - Passenger - Codes : 2
Heating & Air Conditioning - Codes : 0
Radio - Codes : 0
Rear Heating & Air Conditioning - Codes : 0
Instrument Panel Cluster - Codes : 0
Park Distance Control System - Codes : 2
Radio - Codes : 0
Seat Module - Codes : 0
Steering Column - Codes : 0
Thief Deterrent - Codes : 0
Tire Pressure Monitor - Codes : 0
Transfer Case - Codes : 0
Engine - All Powertrain Codes
P0101 - Mass Air Flow Circuit Out Of Range
P0455 - EVAP System Leak (Large)
P0171 - Fuel System Too Lean Bank 1
P0420 - Catalyst Efficiency Low Bank 1
Transmission - All Powertrain Codes
P0101 - Mass Air Flow Circuit Out Of Range
P0455 - EVAP System Leak (Large)
P0171 - Fuel System Too Lean Bank 1
P0420 - Catalyst Efficiency Low Bank 1
Passenger Presence System - Codes
B1022 - Driver Loop Resistance Low
B1061 - Lamp Circuit Failure

**Snap-on® SCAN VEHICLE
PRE/POST SYSTEM REPORTS**

FIND OUT MORE

USB Printer Setup

1. Turn the printer on.
2. Connect the USB cable from the printer to the diagnostic tool.
3. Windows should automatically detect and install the printer.
4. Follow the onscreen instructions (**Figure 5**) to install the printer and then set the printer as the default printer, see **Default Printer Setting**.

Note: If the printer driver files are not automatically installed, you will have to manually install the printer driver files. Printer driver files may be supplied with the printer (e.g. CD or memory stick), or check the printer manufacturer's website to download the files. Follow the manufacturer's instructions for driver installation.

Add Printer Wizard (network printer connection)

Use this procedure if you not directly connecting the printer with a USB cable to the diagnostic tool.

1. Turn the printer on.
2. Select **Start** from the Windows desktop.
3. Select **Printers and Faxes** (**Figure 6**) from the systems menu.
4. Select **Add Printer** (**Figure 7**).

The Add Printer Wizard opens.

5. Follow the onscreen instructions to install the printer and then set the printer as the default printer. See **Default Printer Setting**.

Note: If the printer driver files are not automatically installed, you will have to manually install the printer driver files. Printer driver files may be supplied with the printer (e.g. CD or memory stick), or check the printer manufacturer's website to download the files. Follow the manufacturer's instructions for driver installation.

Default Printer Setting

To set a default system printer:

1. Select **Start** from the Windows desktop.
2. Select **Printers and Faxes** (**Figure 5**) from the systems menu (right side).
3. Select (double-click) the printer you want to set as the default printer from the list of installed printers (**Figure 8**).
The printer status window opens.
4. Select **Printer** from the toolbar menu.
5. From the menu, select "Set as default printer" (**Figure 8**). When set, a check mark is displayed next to the option.
6. Close the printer status window.

Figure 5

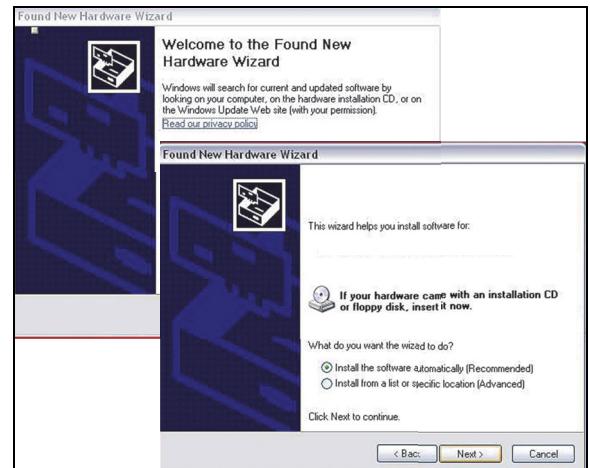


Figure 6



Figure 7

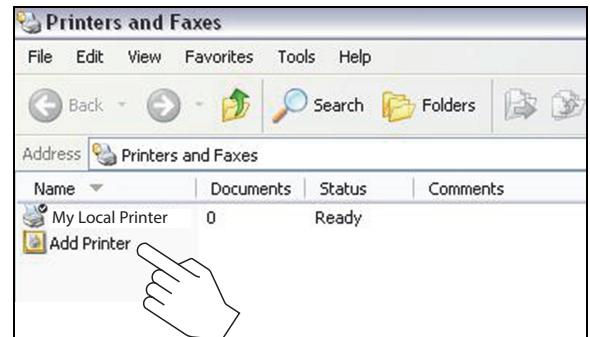


Figure 8

